MFBio Web Configuration

Compatible to version 1.00.02 April-30/2013 (HW1.1) MFBio Web Ver1.0 Build Date 04/12/2013

[Content]

/EB Configuration —	1
Log In to WEB browser	1
Prepare to establish connection with MFBio	1
How to get to work of MFBio Web browser	1
Enter to MFBio web server by Internet Browser	5
Main Page (Terminal Information)	7
About Main Page	8
Account Management	10
Access Log	10
About Access Log	11
Auto Refresh	12
About Auto Refresh Log	12
View User List	13
About View User List	13
User Record	14
Modify User Record	15
Add New User	16
About Add User	17
Fingerprint template synchronization	18
Fingerprint Template Synchronization description	18
Terminal	19
Terminal Information	19
About Terminal Status	20
Terminal Setup	21
About Terminal Setup	22
Password Setup	24
Web Log on setup/Password setting description	24
System Log	26
About System Log	26
System Clock Setup	27
About System Time Rectification	27
Access Control	28
Time Set	28
About Time Set	28

About Time Zone	
About Time Zone information	
Group Setup	
About Group	
About Group Information	
Holiday Setup	
About Holiday setup	
Door Setup	
About Door Setup	
Setup BF-50	
BF-50 Card setup	
Remote Control	
Door status/ Security Bypass	
Event Handle	
About Event Handle	
Tool	
Tool IP Camera	
Tool IP Camera About IP Camera	
Tool IP Camera About IP Camera Back Up	
Tool IP Camera About IP Camera Back Up About Back Up	
Tool IP Camera About IP Camera Back Up About Back Up Restore	
Tool IP Camera About IP Camera Back Up About Back Up Restore About Restore	
Tool IP Camera About IP Camera Back Up About Back Up Restore About Restore Reboot	
Tool IP Camera About IP Camera Back Up About Back Up Restore About Restore Reboot About Reboot	
Tool IP Camera About IP Camera Back Up About Back Up Restore About Restore About Restore Reboot About Reboot Firmware upgrade	
Tool IP Camera About IP Camera Back Up About Back Up About Back Up Restore About Restore Reboot About Reboot Firmware upgrade About Firmware upgrade	
Tool IP Camera About IP Camera Back Up About Back Up About Back Up About Restore About Restore Reboot About Reboot Firmware upgrade About Firmware upgrade Reset	
Tool IP Camera	
Tool	$\begin{array}{c}$

Copyright @ 2011. All Rights Reserved.

Document Version: 1.2

All trademarks and trade names are the properties of their respective owners.

-WEB Configuration -

Log In to WEB browser

MFBio featured an in-built HTTP server to serve MFBio to be browsing and configuring data over web browser.



Prepare to establish connection with MFBio

Before processing to MFBio configuration, need to double check:

- Computer has connected to MFBio as a physical connection within same Local Area Network (LAN), and power supply for MFBio is normal.
- Default IP for MFBio is (192.168.0.66), check for any IP duplication at the same LAN.



How to get to work of MFBio Web browser

1 Vhen Computer has well connected with MFBio in at the LAN, using IP search utility <u>SEMACSearch</u> to gather all MFBio machine(s) at the LAN into the list. SEMACSearch utility attached with product package or download from CHIYU web site

(www.chiyu-t.com.tw).

Desktop Icon for the SEMACSearch is as following:



2 • Tap the SEMACSearch utility icon to create Internet connection for the device(s):

Ter	minal ID	Model Name	IP Address	Subnet mask	Gateway	MAC Add	ress	Software IP
1		Biosense-HW1.0(E	192.168.3.158	255.255.255.0	192.168.3.1	00 OE E3	00 00 18	8 192.168.3.7
							1	Refresh
Athe	eros L2 Fast troller	Ethernet 10/100Base-1		IP Address : 19 Subnet Mask : 25	12 168 3	. 158 5 . 0	Sear (* E	Refresh Ich Broadcast
Athe Con Ac	eros L2 Fast troller tive Route : IP Add Subne Gatew	Ethernet 10/100Base-1 fress : 192.168.3.76 t Mask : 255.255.255. av : 192 168.3.254		IP Address : 19 Subnet Mask : 25 Gateway : 19 Mac Address : 00	12 168 3 5 255 25 12 168 3 10E E3 00 00 18	. 158 5 . 0 . 1	Sear	Refresh Inch Broadcast Specific IP Addr 168.3.0
Athe Con Ac	eros L2 Fast troller tive Route : IP Add Subne Gate w	Ethernet 10/100Base- fress : 192.168.3.76 t Mask : 255.255.255. ay : 192.168.3.254		IP Address : [19 Subnet Mask : [25 Gateway : [19 Mac Address : [00 Software IP : [19	12 168 3 5 255 25 12 168 3 10E E3 00 00 18 12.168.3.79	. 158 5 . [0	Sear © E © S [192] PS: IP 192] IP 192]	Refresh Ich Stoadcast Specific IP Addr 168.3.0
Athe Con Ac	tive Route : IP Add Subne Gatew tive Route : IP Add Subne Gatew	Ethernet 10/100Base- tress : 192.168.3.76 t Mask : 255.255.255. ay : 192.168.3.254 tress : 192.168.100.76 t Mask : 255.255.255.255.0 ay : 192.168.3.254		IP Address : [19 Subnet Mask : [25 Gateway : [13 Mac Address : [00 Software IP : [19 Software Port : [20 Terminal ID : [1]	12 168 3 5 255 25 12 168 3 10E E3 00 00 18 12.168.3.79	. 158 5 [0	Sear Sear Sear 192 192 192 192 192 192 192 192	Refresh Inch Broadcast Specific IP Addr 168.3.0 168.0.0 scan 8.0.1~192.168. 158.0.66 only s

3 \ When SEMACSearch configuration box pop-up, all MFBio devices will be displaying on the list including individual Terminal ID \ Model Name \ IP Address \ Subnet Mark \ Gateway \ Mac Address \ Software IP. Tap one of MFBio from the list will display related information for the MFBio.

Aut	•	IP Address : 192 168 3 158	Refresh
Atheros L2 Fast Ethernet 10/1008ase-1 Controller		Subnet Mask : 255 255 255 0	Search
Active Route : IP Address : 192.168.3.76 Subnet Mask : 255.255.255.0	E	Gateway: 192 168 3 1	C Specific IP Address
Gateway : 192.168.3.254		Software IP : 192.168.3.79	PS: IP 192 168 0.0 scan
Active Route : IP Address : 192.168.100.76 Subnet Mask : 255.255.255.0		Software Port : 2000 Terminal ID : 1	192.168.0.1~192.168.0.255 IP 192.168.0.66 only scan 192.168.0.66
Gateway : 192.168.3.254	-	Alter	Exit

4 \ MFBio IP information can be modified: IP Address \ Subnet Mask \ Gateway \ Software IP \ Software Port \ Terminal ID. Tap <u>Alter</u> to finish to moification.

Terminal ID M	lodel Name	IP Address	Subnet mask	Gateway	MAC Address	Software IP
B	iosense-HW1.0(El	192.168.3.158	255.255.255.0	192.168.3.1	00 OE E3 00 0	10 18 192.168.3.79
Atheros L2 Fast Ether Controller	net 10/100Bat	MAC Search Success I Please R	efresh Again After	5 Seconds !		Refresh -Search
Active Route :	192 168 3 76	=	Gateway : 19:	2 168 3	.0	 Broadcast Specific IP Addres

5 \cdot When rectification is done, tap **<u>Refresh</u>** to check connection result, then tap <u>**Exit**</u> to exit.

Terminal ID	Model Name	IP Address	Subnet mask	Gateway	MAC Address	Software IP
1	Biosense-HW1.0(E	192.168.3.158	255.255.255.0	192.168.3.1	00 OE E3 00 00 1	8 192.168.3.79
		20.12				
Atheros L2 Fast Controller	Ethernet 10/100Base-1		IP Address : 19	2 . 168 . 3		Refresh arch 🔗 -
	*****		Subnet Mask : 25	5 . 255 . 255	.0 0	Broadcast
			Gateway : 10	2 168 3	- <u>1</u>	Specific IP Addres
Active Route : IP Ad Subre	dress : 192.168.3.76 et Mask : 255.255.255.0	=	Mac Address : 00	OE E3 00 00 18	[19	2.168.3.0
Active Route : IP Ad Subne Gatev	dress : 192.168.3.76 et Mask : 255.255.255.0 eay : 192.168.3.254		Mac Address : 00 Software IP : 19	OE E3 00 00 18 2.168.3.79	[19	2.168.3.0

- 6 With two different methods to enter to web server of MFBio:
 - (1) Run the utility SEMACSearch then choose one MFBio from the list. Double click the item from the list to enter to MFBio web server.
 - (2) Input MFBio IP on the URL bar to enter to MFBio web server.

Double check Operation System on computer and MFBio devices are in the same Local Network Area. Examples for Windows XP and Windows 7 :

A. For WINDOWS XP

Step 1 : Tap "My computer" \rightarrow Control Panel \rightarrow Network

Step 2 : Tap Area Network → Content → Area Network Setup→ Tap Internet Protocol(TCP/IP) to configure LAN IP segment same with MFBio's

🔸 Local Area Connection Properties 🛛 🔹 🕅	Internet Protocol (TCP/IP) Properties
General Authentication Advanced Connect using: Intel(R) PR0/1000 MT Network Con Configure This connection uses the following items: Image: Client for Microsoft Networks Image: Client for Microsoft Networks	General You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings. Optain an IP address automatically Optain an IP address: IP address: 192.168.0.78
Install	Subnet mask: 255.255.255.0 Default gateway: 192.168.0.1 Obtain DNS server address automatically
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.	Image: Server addresses: Preferred DN5 server: 192,168,95,1 Alternate DN5 server:
OK Cancel	Ad <u>v</u> anced OK Cancel

For WINDOWS 7

- Step 1 : Tap Control Panel from Windows 7→ Search Network Center→ Tap Change Interface card and then get into Local Network
- Step 2 : Tap Area Network → Content → Area Network setup → Click Internet
 Protocol(TCP/IPv4) → Set the IP segment same with MFBio.

vetworking	General	
Connect using:	You can get IP settings assigned this capability. Otherwise, you no for the appropriate IP settings.	automatically if your network supports eed to ask your network administrator
Configure	Obtain an IP address autor	natically
 ✓ Interfective Client for Microsoft Networks ✓ Interfective Client Scheduler 	IP address:	192 . 168 . 3 . 78
Eile and Printer Sharing for Microsoft Networks	S <u>u</u> bnet mask:	255 .255 .255 . 0
✓ Internet Protocol Version 4 (TCP/IPv4)	Default gateway:	192.168.3.254
Link-Layer Topology Discovery Mapper I/O Driver Link-Layer Topology Discovery Responder	Obtain DNS server address	automatically
	OUSE the following DNS serve	er addresses:
Install Uninstall Properties	Preferred DNS server:	168 . 95 . 1 . 1
Description Transmission Control Protocol /Internet Protocol. The default	Alternate DNS server:	8.8.8.8
wide area network protocol that provides communication across diverse interconnected networks.	Validate settings upon exit	Advanced

- •
- 1 MAC Address cannot be modified.
 - $2 \cdot$ Teminal ID should not be duplicated.

• Enter to MFBio web server by Internet Browser

- 1 Run Internet Browser and input IP of MFBio to the URL bar. Default IP: <u>http://192.168.0.66</u>
- $2 \cdot$ When failure on connection, double check:
 - Power supply is normal or not.
 - LAN connection is normal or not can be detect by Command line: Tool
 →Execute→Input "cmd" to run MS-DOS command line→ Input "ping 192.168.0.66" to test connection of MFBio:



- If no response, it is necessary to check and adjust IP information between Computer and MFBio devices. (Same LAN IP segment is needed)
- Set computer IP information the same with MFBio IP segment. When computer is using Static IP then it should be changed to within 192.168.0.1 ~ 192.168.0.65 or 192.168.0.67 ~ 192.168.0.254."Subnet Mask"should be 255.255.255.0

3 • When connection between computer and MFBio is established, system will pop up an UserID/Password dialogue box. Default name is : admin / admin

The server 19	2.168.3.113 at requires a username and password.
Warning: This	s server is requesting that your username and password be
sent in an ins connection).	ecure manner (basic authentication without a secure
ة -	
	User name
	Prevent
	Password Passwo
L	

 $4 \ \ \$ Input User name and Password to enter to MFBio's Web server.

Main Page (Terminal Information)

User Administration Access Log	TERMINAL STATU	S
Auto Refresh Log View User List	Deschurt Name :	Biocosco/M1\/20000\
Add User	Product Name :	biosense(m)(2000)
	Serial No. :	026b58(222720)
Terminal Status	Firmware Version :	1.00.02,Dec 27 2012(HW1.1)
Terminal Setup	System Time :	01/06/2013 17:35:17
Password Setup	Terminal ID(MAC Address) :	1(00:0e:e3:02:6b:58)
Clock Setup	IP Address :	192.168.2.100
1	Subnet mask :	255.255.255.0
Access Control Time Set	Default Gateway :	192.168.2.1
Time Zone Setup	Primary DNS :	168.95.1.1
Group List	Listen Port/Software IP(status) :	2000 / 0.0.0.0 (Offline)
Door Setup	Web Management Port :	80
Remote Control	Registered User :	0
Event Handle	Available User Capacity :	20000
Tools	Registered FP :	0
IP Camera Radius	Available FP number :	9590
Restore	Access/System Log Count :	0/5
Reboot	Control Mode :	Controller(WG34)
Upgrade Firmware Reset	Anti-Pass-Back(Tolerance Timer) :	Disabled(0)
	Next Biosense(Status) :	0.0.0.0(Offline)

[Main Page] - 1

♦ About Main Page

► Account Manag	gement
	1 · Inquiry to all access logs
Access Log	2 • Inquiry by certain criteria and extract access log and event records with
	Text or Excel format report
Auto Refresh	Displaying real time access log
	1 • Displaying all user list
User List	2 · Modify/Delete/Inactive/Active user account
	1 · Add single user's account
Add User	2 · Add many user's accounts
Fingerprint	Synchronized fingerprint templates between fingerprint devices when more
Synchronization	than 1 fingerprint access controllers are connected the same time.
► Terminal	
Terminal	Displaying terminal information as : Terminal ID, Model name, Firmware
Information	versionetc
	1 • Setup Terminal criteria as : Terminal ID, Control mode, Language
Terminal Setup	modeetc
	2 • System and hardware reboot after configuration is done
Deserved Codere	1 • Setup web log in Password for Administrator, User, Sub-User
Password Setup	2 • Setup Common password
(web log in)	3 · Terminal reboot after Password setup is done
Sandara I a s	1 • Displaying system log for terminal
System Log	2 • Extraction system log report as TXT or Excel format
System Time	1 • Setup Network Time Server and Time Zone
Rectification	2 · Setup System time
► Access Control	
Time Set	Setup Time Set (255 time sets provide)
Time Zone	Setup Time Zone. Each Time Zone provide Monday to Sunday and Holidays
	(120 Time Zone provide)
Group	Setup Group (255 Groups provide)
Holiday	Setup Holiday (100 Holidays provide)
Door Setup	Door setup time zone for door with Exit button, Unlock, APB Time Zone
	1 • Displaying entrance/exit status
	2 • Displaying fire alarm detection status
Domoto Control	3 • Remote Control for entrance/exit such as: Remotely force open, Remotely
Kemote Control	Impulse open, Remotely emergency open
	4 • Event alarm released
	5 • Turn on/ Turn off fire alarm detection function
Event Hardla	1 • Setup Event type and latched time.
Event Handle	2 Setup E-mail alert information

Using menu bar to browse main page functionality:

► Tools	
ID Comoro	1 • Displaying IP Camera IP address, type, and account name, password
IP Camera	2 • Displaying IP Camera screen shot pictures (Latest one)
Backup	Backup for user list and terminal configuration
Restore	Restore for user list and terminal configuration
Reboot	System reboot
Firmware	Undata firmwara
upgrade	Opdate minware
Doloto	1 • Delete information
Delete	2 • Set to Factory Default value
► Button	
Refresh	Refresh Web screen

Account Management



♦ Access Log

Press Access Log to check log information:

No. User ID							
	User Na	ame	Date	Time	IN/OUT	Door	Note.
			No Log Data				
Query and Exp	ort						
Туре	Selection	Start Date	End Date				
🖲 user 🔘 event	◉ Single ⊚ All	2013/01/07	2013/01/07				
User ID	Card No.						
Export Type							
◉ Txt XIs	Search	Export					

[Access Log] - 2

♦ About Access Log

► Description for	the Access Log list				
No.	Serial Number				
	User ID for Log in/ log out. Tap User ID for a hyper link to modification				
	screen. (Deleted user ID cannot be link)				
User ID	* User type will be indicated after User ID with Parenthesis, can be				
	subdivide to :				
	Normal user (N) Administrator(S) Visitor(V) Guard tourG				
Name	User name for log in/log out. Name field could be empty when nothing input				
	to the user name field.				
Date	Date for Log in / Log out				
Time	Time for Log in/ Log out				
In/Out	In/Out records indication				
III/Out	* APB level will be indicated with parenthesis				
Door No.	Door no. for the MFBio				
	Displaying access log:				
	• Normal open for door: when user log on by card, will display (C), or when				
Remark	user log on by fingerprint, will display (F).				
Kemur K	• Abnormal door open: when door is opened by abnormal method, such as:				
	Anti duress, fire alarmetc.				
	• Un-registry card will display the card number.				
First	First page to access log record				
Previous 10 page	Forward 10 pages				
1 2 3N	Move to certain page				
Last 10 page	Backward to last 10 page				
Last	Last page to access log record				
► Inquiry and ext	raction				
Type	$1 \cdot By$ ticking user account(s) to search and extract report				
-) F -	$2 \cdot By$ ticking event type to search and extract even handle records				
	1 • Single : Only inquiry/extract access log for single user, or under 5 types of				
Number	event handle records.				
	2 · All : Inquiry / Extract all access logs or event records				
Start /End date	Setup date criteria period to search the access log				
User ID	Input user ID to inquiry/extract report				
User Card no.	Input user card no. to inquiry/extract report				
F 4	Select and input event type to further inquiry. Up to 5 event types can be				
Event	inquiry.(select by pull down menu)				
► Button					
Inquiry	Setup searching criteria then tap Search button to search				
E-tara 14	Setup extraction criteria, tap Extract button to extract report as TXT or Excel				
Extract	format.				

♦ Auto Refresh

Press Auto Refresh will enter to Auto Refresh log screen. :

Auto Refresh Log Mon Jan 7 2013 18:00:52 UTC+0800

No.	User ID	User Name	Date	Time	IN/OUT Door	Note.

[Auto Refresh Log] - 3

♦ About Auto Refresh Log

► About Auto	Refresh Log
No.	Serial no.
User ID	Display real time access log with User ID. For the event record, will be display as
Name	Display real time access log with user name. When user information is short of the name, will be display as
Date	Display real time access log with date
Time	Display real time access log with time
In/Out	Display real time access log with In/Out indication
Door No.	Display real time access log with door no.
	Display real time access log with information:
Domark	• For Normal open: displaying verification is by Card (C),or by Fingerprint (F)
Kellial K	• For Abnormal open: displaying events like Anti duress, Fire alarmetc.
	• For un-registry cards: displaying the card number.

Ser Li Sea	St arch User :	۲	By User ID 🔘 By Card No. 🔘 By	Employee ID 🔘 By Us	er Name		GO		
					*Reg Type:F	(Finger) ,P(Pa:	sword	l) , C(Ca
No.	User ID	Employee ID	User Name	User Type	Active	F	Р	С	Verify mode
			No Registered User						

[View User List] - 4

♦ About View User List

► Inquiry	
By User ID	Input User ID to search
By Card No.	Input Card no. to search
By Employee No.	Input Employee no. to search
By User name	Input User name to search
Start (Button)	Start to inquiry
► User List	
No.	Serial number for the user list. By ticking boxes then clicking Activate, Inactivate or Delete button for active, inactive or delete user from list.
User ID	Displaying User ID.
User Employee ID	Displaying Employee ID
User Name	Display User name
User type	User type is subdivide to: Normal User(N)
Activate	Green light: User account active/ Gray light: User account inactive
F	User has registry the fingerprint template
С	User has registry the Card (Green Light)
Verification mode	Display user verification mode
First	First page of user list
Previous 10 page	Forward 10 page
1 2 3N	Link to certain page number
Last 10 page	Move to last 10 page
Last	Link to last page
► Button	
Active	User authority is activated
Inactive	User authority is inactivated
Delete	User Deleted

• User Record

Tap User list \rightarrow User ID to enter to modification page :



[User Record] - 5

♦ Modify User Record

► About User Informa	tion			
	User ID value is available within 1~4294967295, exceeding any			
User ID	4294967295 value cannot be save.			
	(Total 20,000 user account no. only)			
User Card no.	Card no. can be input manually or input by card decoder.			
Usor omployoo no	Up to 10 English alphabets can be input.			
User employee no.	(Chinese name can be 3 words only)			
Name	User name can be input up to 10 Chinese words or 30 English alphabets			
Validation check	User account validation check.			
Validation date from to	Input a date for user account validation check			
Status	Active or in active user authority. Tick the box			
	User type can be selected as Normal user Administrator Visitor Guard			
	tour:			
Leor Type	Normal User: Normal User			
User Type	Admin : Not limit by APB rule			
	Visitor : Visitor can be limit by validation date			
	Guard tour : Keep log but door will not open			
Group	4 Groups can be selected for each user. Default is "Allow"			
	C+F: Card + Fingerprint			
	F : Fingerprint only			
Verification Mode	\mathbf{C} : Card only			
	C/F : Card or Fingerprint			
	N/A : Verification by Group bypass time zone level			
FP no.	Display template number for user			
► Button				
Scan FP 1	Blue LED on the MFBio will flash quickly, user scan first one template			
Scan FP 2	Blue LED on the MFBio will flash quickly, user scan second one			
	template			
Previous	Modify previous one information			
Save	Save data			
Delete	Delete data			
Next	Modify next one information			

◆ Add New User

User Record	
Add New User	
REG :	😻 Single 🌐 Continuous 🛛 Amount :
User ID :	
Card No. :	
Employee ID :	
Name :	(Max 31 chars.)
Expire Date Check :	🖲 Disable 🗇 Enable
	From 2013 V (M) 01 V (D) 08 V (H) 18 (M) 2
	To 2013 - (M) 01 - (D) 06 - (H) 18 (M) 2
Status :	🕷 Activate 🙁 Deactivate
User Type :	Normal User 👻
Group : 1	1. Free Time Group V 2. Disallowed Group V 3. Disallowed Group V 4. Disallowed Group V
Verify mode :	C/F 👻
Personal Password :	(4 ~ 8 digits.)
Personal Confirm :	
Number of Finger :	0
	Scan Finger 1
	Scan Finger 2
	Save

[Add new user] - 6

♦ About Add User

User information			
	Single : Registry one user account in a time		
Registry	Continual : Registry 1~20000 user accounts in a time. Input user		
	account quantity. (a continual series no. is required)		
	User ID value is available within 1~4294967295, exceeding any		
User ID	4294967295 value cannot be save.		
	(Total 20,000 user account no. only)		
User Card no.	Card no. can be input manually or input by card decoder.		
Licon amployee no	Up to 10 English alphabets can be input.		
User employee no.	(Chinese name can be 3 words only)		
Name	User name can be input up to 10 Chinese words or 30 English alphabets		
Validation check	User account validation check.		
Validation date from	Input a date for user account validation check		
to	input a date for user account vandation check		
Status	Active or in active user authority. Tick the box		
	User type can be selected as Normal user Administrator Visitor Guard		
	tour:		
User Type	Admin : Not limit by APB rule		
	Visitor : Visitor can be limit by validation date		
	Guard tour : Keep log but door will not open		
Group	4 Groups can be selected for users. Default is "Allow"		
	C+F: Card + Fingerprint		
	F : Fingerprint only		
Verification Mode	\mathbf{C} : Card only		
	C/F: Card or Fingerprint		
	N/A : Verification by Group bypass time zone level		
FP no.	Display template number for user		
► Button			
Scan Fingerprint 1	Scan fingerprint once, LED flashing rapidly to scan first fingerprint		
Scan Fingerprint 2	Scan fingerprint once, LED flashing rapidly to scan second fingerprint		
Save	Save data		

♦ Fingerprint template synchronization

FP Sync			
Auto FP Sync	:		
Sync Time :	00:00:00 (hh:mm:ss) set		
FP Sync :			
Sync user :		Il O Single	
		set	

[Fingerprint template synchronization] - 7

♦ Fingerprint Template Synchronization description

► Fingerprint Template Synchronization			
Auto Synchronization	Automatically fingerprint synchronization on a certain time preset to system		
Manually Synchronization	Manually synchronization by choosing one or many UID		

➤ Terminal



♦ Terminal Information

TERMINAL STATUS

Product Name :	Biosense(EM)(20000)
Serial No. :	02415e(111821)
Firmware Version :	1.00.02,Dec 27 2012(HW1.1)
System Time :	08/08/2004 18:29:31
Terminal ID(MAC Address) :	1(00:0e:e3:02:41:5e)
IP Address :	192.168.2.100
Subnet mask :	255.255.255.0
Default Gateway :	192.168.2.1
Primary DNS :	168.95.1.1
Listen Port/Software IP(status) :	2000 / 0.0.0.0 (Offline)
Web Management Port :	80
Registered User :	0
Available User Capacity :	20000
Registered FP :	0
Available FP number :	9590
Access/System Log Count :	0/3
Control Mode :	Controller(WG34)
Anti-Pass-Back(Tolerance Timer) :	Disabled(0)
Next Biosense(Status) :	0.0.0.0(Offline)

[Terminal Status] - 8

♦ About Terminal Status

Terminal Information	
Terminal Name	Display MFBio terminal name
Serial No.	Display MFBio serial no.
Firmware Version	
(Hardware version)	Display MFBIO firmware version and hardware version
System Time	Display MFBio system time
Terminal ID	Display MEDia Terminal ID and MAC address
(MAC address)	Display MFBIO Terminal ID and MAC address
IP address	Display MFBio IP address
Subnet Mask	Display Subnet Mask
Default Gateway	Display Default Gateway
DNS	Display DNS
Software Communication Port	Display software communication port no. and the software
No./Software IP	IP address. Status will display On-line or Off-Line with
(Status)	the software
WEB Port no.	Display MFBio WEB communication port no.
Registered User	Display MFBio user registered number
Available User account no.	Display MFBio available user account no.
Access log no. and System log no.	Display MFBio access log and system log number
Control mode	Display MFBio control mode (Controller: WG34)
APB	Display MERic ADP status and recovery time
(Recovery time)	Display MIFBIO AFB status and recovery time
Anti-Duress	Display MFBio anti-duress status
Next	Display next MFBio IP address and display connection
MFBio (Status)	status (On line or Off line)

♦ Terminal Setup

Terminal Configuration

Terminal Setting :	Terminal ID : 1
	*IP Address : 192 . 168 . 2 . 100
	*Subnet Mask : 255 , 255 , 255 , 0
	*Gateway : 192 , 168 , 2 , 1
	*DNS Server: 168 . 95 . 1 . 1
Listen Port :	*TCP Port(Software Used): 2000 *Software IP: 0.0.0.0
Control Mode :	Controller C FP Reader
Web Language :	English 🔻
Anti Pass Back :	🙁 Enable 😻 Disable
	Tolerance Timer 0 (Minute, Maximum 65535, 0 means No Tolerance)
WEB Managemant Port :	Http Port : 80
Next Biosense(for APB):	IP Address : 0 . 0 . 0 . 0
Fast Reg Card Mode :	Enable Disable
Sound for verify card :	🙁 Enable 😻 Disable
Security Level :	Auto Normal 🔻 (Default: Auto Normal)
Illegal FP Access record :	Enable Disable
FP auto adjustment :	😻 Enable 🙁 Disable
LED Flash Time :	1 (Sec, 0 = disable,maximum is 255)
	Terminal may need to restart after configuration saved.
	Save

[Terminal Setup] - 9

♦ About Terminal Setup

► Terminal Setup	
Terminal ID	Setup MFBio Terminal ID. Default no. is 1, maximum is 65535.TID should
ID o dduogg	not be duplicated
IP address	Setup IP address for MFB10
Subnet Mask	Setup Subnet Mask for MFB10
Default Gateway	Setup Default Gateway for MFB10
DNS IP address	DNS IP address for MFB10. Default IP 1s 168.95.1.1
► Port No.	
Communication port (Software)	Communication port no. between Sotware and MFBio. Default no. Is 2000
Software IP	IP address for software, default no. is 0.0.0.0
► Control Mode	
Controller	MFBio can be controller mode
Reader	MFBio can be reader mode (Wiegand)
► Web Language	
English	Select Web language as Englsih
Chs	Select Web language as Simplified Chinese
Others	Select other language for Web server. Default is Traditional Chinese
► Anti-Passback	
Active	Activate APB rule
Inactive	Inactivate APB rule
Deservery Times	Recovery time after APB rule is triggered. Unit is Minutes, up to 65535. 0
Recovery Time	means recovery by manually set up.
► WEB Setup	
Communication Port	Setup MFBio web port no., default is 80
► Next MFBio (for APB rule)
	Setup IP address for next MFBio. For multi-drop MFBio structure, system
IP address	configuration (APB, Firealarmetc) will fully synchronize to next MFBio.
► Fast Registry M	Iode
A atima	Fast Registry mode should be inactive immediately while card registry
Acuve	process is done.
Inactive	Disable fast registry card function
► Flash card voi	ce indication
Active	Enable voice indication when flash card
Inactive	Disable voice for flash card
► Fingerprint ve	rification level

Default setting is A	Auto Normal (Note : Do Not change)	
► Illegal fingerpri	int record	
Active	Illegal fingerprint will be record	
Inactive	Illegal fingerprint will not be record	
► Fingerprint Auto Rectification		
	Scan twice each time for one fingerprint. System will automatically rectify	
Active	the differences between two templates (from one finger). Template capacity	
	will be occupied when rectification mode is active.	
Inactive	Scan once each time for one fingerprint.	
► LED flashing ti	me	
LED flashing interv	val	
► ADD card		
Input a card no. wil	l create the card to be an ADD card	
► Delete card		
Input a card no. wil	l create the card to be an DELETE card	
► Button		
Save	Save terminal information	

Password	Setup
----------	-------

WEB Logon Setting

Administrator WEB Logon User Name : Administrator WEB Logon Password :	admin	(47 Char. Max) (35 Char. Max)
Operator WEB Logon User Name : Operator WEB Logon Password :	user	(47 Char. Max) (35 Char. Max)
USER WEB Logon User Name : USER WEB Logon Password :	user0 •••••	(47 Char. Max) (35 Char. Max)



♦ Web Log on setup/Password setting description

► About Web Log setting		
Admin user Account	Input Admin account name, maximum at 47 alphabets. Default is "admin"	
Admin Password	Input Admin password, maximum at 35 alphabets. Default is "admin"	
User Account	Input user account name, maximum at 47 alphabets. Default is "user"	
User Password	Input user account password. Maximum at 35 alphabets. Default is "user".	
Sub-User account name	Input Sub-user account name. Maximum at 47 alphabets. Default is "user0"	
Sub-User Password	Input Sub-user password. Maximum at 35 alphabets. Default is" user0"	
The difference between the roles is operation authority. Blow is the authorization table for the		
roles.		
► Button		
Save	Save information	

	Admin	User	Sub-User
Web Server	Account : admin	Account : user	Account : user0
	Password : admin	Password : user	Password : user0
Upgrade Firmware	•		
Password Setup	•		
Terminal Setup	•		
Door Setup	•		
Event Handle	•		
Reboot	•		
Clock Setup	•		
Reset	•		
Upgrade Firmware	•		
Password Setup	•		
Terminal Setup	•		
User Data	•	•	
Time Set	•	•	
Time Zone Setup	•	•	
Group List	•	•	
Holiday Setup	•	•	
Lift Setup	•	•	
Multi Badge Group	•	•	
Remote Control	•	•	
Access Log	•	•	•
View User List	•	•	•
Terminal Status		•	
System Log		•	•
IP Camera			

Authorization Table : • means "Allow" to access.

♦ System Log

System Log

			Export Txt Exp	port XIs
No.	Date	Time	Description	
1.	06/06/2004	16:29:07	System Warm Start	
2.	06/06/2004	16:28:28	System Power ON	
3.	06/06/2004	16:27:24	ETH Dev Link Down	
Total 3 R	ecord(s)		< En	d of List >

[System Log] - 11

♦ About System Log

► Record	
No.	Serial No.
Date	Date of each system log
Time	Time of system log
Content	Description to system operation
Extract TXT log	Extract system log as TXT format report
Extract XLS	Extract system log as XLS format report
X System log will sustain up to 2688 entries.	

♦ System Clock Setup

System Clock Setup

	time.windows.com			Recommend: time.windows.com or time.nist.go
me Zone:	(GMT) England			▼
				Save
		New Dete -	01/09/2012	
		New Date :	01/09/2013	(mm/dd/yyyy)
		New Date : New Time :	01/09/2013	(mm/dd/yyyy) (hh:mm:ss)

[System clock setup] - 12

♦ About System Time Rectification

► About Network	Time Server
Disable	Tick to disable Network Time Server service
Fnabla	Tick to enable Network Time Server service (Network Time Server IP
Ellable	required to be input when ticking "Enable")
Time Zone	Select Time Zone from the menu after ticking Enable and input Time Server
Time Zone	IP address .(Default Time Zone for Time Server is "England")
Save(Button)	Save the data and process time rectification
Data	Date of the computer. This can be input manually.
Date	Date format is Month/Date/Year
Time	Time of the computer. This can be input manually.
Time	Date format is Hour/Minute/Second
Save(Button)	Save date and starting date/time rectification

Access Control

♦ Time Set

Time Set

Time Set List :								
	000 00:00 ~ 00:00	001 00:00 ~ 23:59						
Tin	ne Set : 002 ▼ From 00 H	: 00 M To 23 H : 59	M SET					

【Time Set】 - 13

♦ About Time Set

► Time Set					
Time Set list	Display all Time Set(s) at the system. Default Time Set of system is				
I me Set list	00:00~00:00 and 00:00~23:59				
Time Set	Select Time Set serial no. (system default is 000 \ 001). Select serial no. for time				
Time Set	set from the menu. Maximum is 255 time sets.				
From~to	Input Time Set period time, such as: 0800~1700, 1000~1900				
► Button					
Delete	Delete Time Set				
Set	Add new Time Set				

Time Zone List

000	Deactivate	001	Any Time

[Time Zone Setup] - 14

♦ About Time Zone

► Time Zone	
Time Zone list	Displaying all time zones at system. Tap a time zone from list will enter
Time Zone list	to the time zone configuration screen
Time gone corial no	Serial no. for time zone. System default is 000 and 001. Select the time
Time zone seriai no.	zone number from the menu. Up to 120 time zone can be select.
Timo Zono nomo	Tap the time zone name to connect to time zone information page for
	data modification.
▶ Button	
Delete	Delete Time Zone
Setup	Enter to Time Zone information page

Time Zone setup page is to set the time set(s) for each day (Monday to Sunday, and Holiday) that user can access to door or time attendance:

									Day	C 🛛	onday												
	Time 1:	000 - 00:00	- 00.00 🔫		Time 2	2: 0	00 - 00:0	0- 00:0	•		Time 3	t (00 – 00	00 - 00	0 v		1	filme 4	t 💽	00 - 00:0	o - 00.0	Ţ	_
	Time 5:	000 - 00:00	- 00.00 🔫		Time 6	5: O	00 - 00:0	0- 00:0	v v		Time 7	: []	00 – 00	aa - aa	10 V		1	Time 8	1	00 - 00:0	o - 00.0	Ţ	
	Time 9:	000 - 00:00	- 00.00 🔫	Т	lme 10	0: 🖸	00 - 00:0	0- 00:0	v v	1	Fime 11	: [00 – 00	aa - aa	10 V		Т	me 12	2	00 - 00:0	o - 00.0	Ţ	
1	Time 13:	000 - 00:00	- 00:00 👻	Т	lme 14	4: 0	00 - 00:0	0 - 00.0		1	Filme 15	i (00 - 00	00 - 00	0 v		Т	me 16	: 0	00 - 00:0	0 - 00.0	•	
-									_		2												
	Mandau		Turneter						(Sav					Det			_	-					
	Monuay		Tuesuay		neur	esuay		inui:	suay		Fillia	/			iluay			Sunua	sy 			ay .	_
ie 1.	000-00	00~00.00	000-00.00~	00.00	000	00.00	~ 00.00	000-	- 00.00	~ 00.00	000	- 00.00	J~000	000	000	00~0	0.00	000	- 00.00	~ 00.00	000-	- 00.0	1.
ne 2:	00000	00~00:00	00000:00~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	00:00	0~ 000	000 00	001	00~0	0:00	000	- 00:00	~ 00:00	000 -	- 00:0) ~
ne 3:	000 00:	00~00:00	000-00:00~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	- 00:00	0~ 00:	000 000	001	00~0	0.00	000	- 00:00	~ 00:00	000-	- 00:0	- د
ne 4:	000 00:	00~00:00	00000:00~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000-	- 00:00	0~00:	000 000	- 00:0	00~0	0:00	000	- 00:00	~ 00:00	000 -	- 00:0	۰ ۵
ne 5:	000 003	00~00:00	00000:00~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	- 00:00	0~00:	000 000	00:0	00~0	0:00	000	- 00:00	~ 00:00	000 -	- 00:0	0~
ne 6:	000 00:	00 ~ 00:00	000 00:00 ~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	00:00	0~ 00:	000 000	00:0	00~0	0:00	000	00:00	~ 00:00	000 -	- 00:0	0~
ne 7:	000 00:	00~00:00	000 00:00 ~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	- 00:00	0~ 00:	000 00	- 00:0	00~0	0:00	000	00:00	~ 00:00	000 -	- 00:0	0~
ne 8:	00000	00 ~ 00:00	00000:00 ~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	00:00	0~00:	000 000	00:0	00~00	0:00	000	00:00	~ 00:00	000 -	- 00:0	0~
ne 9:	000 000	00~00:00	000 00:00 ~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	00:00	0~00:	000 000	00:0	00~0	0:00	000	00:00	~ 00:00	000 -	- 00:0	0~
ne 10:	000 00:	00~00:00	000 00:00 ~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	00:00	0~ 00:	000 000	00:0	00~0	0:00	000	00:00	~ 00:00	000 -	- 00:0	0~
ne 11:	00000	00~00:00	00000:00~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	- 00:00	0~001	000 000	- 00:0	00~00	0:00	000	- 00:00	~ 00:00	000 -	- 00:0	0.
ne 12:	000 000	00~00:00	000-00:00~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	00:00	0~ 00:	000 000	00:0	00~00	0:00	000	00:00	~ 00:00	000 -	- 00:0	0~
ne 13:	000 00:	00~00:00	000 00:00 ~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	00:00	0~ 00:	000 000	- 00:0	00~0	0:00	000	00:00	~ 00:00	000 -	- 00:0	0~
ne 14:	000 00:	00~00:00	000 00:00 ~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	- 00:00	0~00	000 000	00:0	00~00	0:00	000	- 00:00	~ 00:00	000 -	- 00:0	0 -
ne 15:	00000	00~00:00	00000:00~	00:00	000	00:00	~ 00:00	000 -	- 00:00	~ 00:00	000	- 00:00	0~ 00:	000 000	- 001	00~00	0.00	000	- 00:00	~ 00:00	000 -	- 00:0	0.
	000 00	00.00.00	000 00:00	00:00	000	00:00		000	- 00:00	00.00	000	00.00	0.00	000	001	000	0.00	000-	.00.00	. 00.00	000	00.0	

[Time Zone] - 15

♦ About Time Zone information

► Time Zone setup							
Wooldow	Select Monday~Sunday or Holiday from the menu and then can						
weekuay	select time zone for the day						
Time Set 1 Time Set 16	Up to 16 time set can be set to each weekday and holiday.						
1 ime Set 1~1 ime Set 10	Time set should be composed first at time set setup page.						
▶ Button							
Save	Save the Time Zone information						
Cancel	Cancel modification or setup						

◆ Group Setup Group List Group List : 000 Disallowed Group 001 Free Time Group Group ID : 002 ▼ SET

[Group Setup] - 16

♦ About Group

► Group setup				
Group List	Display all group on a list. Tap the Group name to enter to the setup page			
Crown ID	Select Group serial no. from the menu. System default is $000 \\ \circ 001$.			
Group ID	Up to 255 Group can be select			
► Button				
Delete	Delete Group			
Setup	Enter to Group setup page			

Setup page is to select the door (entrance) with access time zone

Group Information

Allowed Door :	Time Zone ID :
1.	000 Deactivate 🔻
	Save Cancel

[Group Information] - 17

About Group Information

► Allow door						
Door	Tick the door box that allowing Group users to access the door during the					
Door	time zone					
Time zone setupTime zone can be select from the pull down menu						
► Button						
Save	Save Group information					
Cancel	Cancel Group information or modification					

Holic	lay Setup
1	Holiday Setup
	01 V Month / 01 V Date SET
	Holiday List :

【Holiday Setup】 - 18

♦ About Holiday setup

► Holiday setup							
Month	Select Holiday Month from the menu						
Date	te Select Holiday Date from the menu						
► Button	▶ Button						
Setup	Add a Holiday						
Delete	Delete Holiday						

Door S	etting								
		IN	OUT						
L4	Card+FP Time Zone :	000 Deactivate 🔻	000 Deactivate 🔻						
L3	FP Time Zone :	000 Deactivate 🔻	000 Deactivate 🔻						
L2	Card Only Time Zone :	000 Deactivate 🔻	000 Deactivate 🔻						
L1	Card or FP Time Zone :	000 Deactivate 🔻	000 Deactivate 🔻						
	Lock Release Time Zone :	000 Deactivate 🔻 First Card No Nee	d 🔻						
	Exit Button TZ :	001 Any Time 🔻							
	Anti Pass Back Level :	IN :0 OUT :0 (0 - 255)							
	Lock Release Time :	10 Sec (1 - 65535, 10 = default)							
Door Open Delay Time : Access Log :		10 Sec (1 - 65535, 10 = default)							
		Recorded 👻							
	Door Sensor Mode:	N/A 🔻							
	Door Relay Energized:	🖱 None 💿 1 Relay 🖱 2 Relay							
SET									
BF50 C	ARD	Set BF50 Card Update BF50 Card							

[Door Setup] - 19

♦ About Door Setup

► Door Setup					
L4(Card + Fingerprint)	When setup L4 bypass time zone for door (Default is Free), user				
Time Zone	should flash card and scan fingerprint to access the door.				
L3(Fingerprint) Time	When setup L3 bypass time zone for door (Default is Free), user				
Zone	should scan fingerprint to access the door.				
L 2(Cond) Time sone	When setup L2 bypass time zone for door (Default is Free), user				
L2(Card) Time zone	should flash card to access the door.				
L 1(Cond on Finger)	When setup L1 bypass time zone for door, user should flash card or				
L1(Card or Finger)	scan fingerprint to access the door.				
	When setup Unlock bypass time zone for door, user could access				
Unloals Time Zone	door without verify cards or fingerprints.				
Unlock Thile Zone	When First admin card is set, then it will require to flash a legal card				
	(registry card) to activate Unlock Time zone for the door.				
Exit button Time Zono	Setup an exit button time zone for door (Exit door only)(Default is				
Exit Dutton Time Zone	Anytime)				
APB In/Out	Setup APB rule for door (In/Out level: 0~255)				
Door Open delay time	Setup door open delay time for relay. (Default is 10 seconds)				
Door Close delay time	Setup door not closed alarm time. (Default is 10 seconds)				
Access Log	Setup "Ignore" or "Record" all access logs (Default is Record)				
	Setup door sensor detection mode: N/A Normal mode , Circuit				
Door concor detection	diagnose, default is N/A				
Door sensor detection	When setup Circuit Diagnose mode, if door sensor is short or open				
	status, door status will display the same Short or Open.				
	Setup door relay trigger after verification is done				
	N/A: No trigger door relay				
	1 Relay : Trigger door relay on terminal.(BF-20/BF-50 door relay				
Door Relay Energized	will be trigger if BF-20 or BF-50 has installed)				
	2 Relay : Not support				
	Double check if Door Relay trigger policy is duplicated with				
	Hard/Soft Alarm				
▶ Button					
	Tap the button to set 50 sets of card numbers on BF-50. When				
Set BF-50 Card no.	terminal disconnection with BF-50, BF-50 will compare card				
	numbers saved on BF-50 to trigger door open relay.				
Refresh BF-50 Card no	Tap the Refresh BF-50 card number to refresh card numbers saved on				
	BF-50				

♦ Setup BF-50

Application : Save 50 sets of card numbers on BF-50 to secure door will still open by flashing those cards saved on BF-50 when connection between Terminal and BF-50 is abnormal.

Preset 50 Cards no. into the BF-50 Card list:

RC	50	CA	DD
DF	. J 0	CA	RD

No.	Card No.								
1	0	2	0	3	0	4	0	5	0
6	0	7	0	8	0	9	0	10	0
11	0	12	0	13	0	14	0	15	0
16	0	17	0	18	0	19	0	20	0
21	0	22	0	23	0	24	0	25	0
26	0	27	0	28	0	29	0	30	0
31	0	32	0	33	0	34	0	35	0
36	0	37	0	38	0	39	0	40	0
41	0	42	0	43	0	44	0	45	0
46	0	47	0	48	0	49	0	50	0

[BF-50 Setup] - 20

♦ BF-50 Card setup

▶ BF- 50 card		
No.	Serial no. of the 50 cards, from 1~50	
Card no. Input card numbers to BF-50 card list		
▶ Button		
Setup	Save the information	

X Card numbers will be saved on BF-50 after press Refresh button.

Door Status Monitoring

Door Stat	te		0	
Webpass	/BF50 Status		х	
Fire Alarr	n Detection		off	
	Pulse Open Door	State	Normal Back To Normal	Force Open
	Fire Alarm D	etection ON	Fire Alarm Detect	ion OFF

[Door status and bypass] - 21

◆ Door status/ Security Bypass

► Door Status						
Door StatusDisplaying update door status. Green light means connection is established in the state of the stat						
Fire Alarm	Display fire alarm detection is on or off					
► Security bypass						
Status	Displaying door security bypass status: Pulse open/ Force open/ Force close					
Pulse open	Tap Pulse open button to remotely open door. When security bypass status is normal. Door open lasting time is set by terminal					
Force close	Tap Force close button to remotely close door and door status will display Force close, door will not be opened anyway until setup Back to Normal or set to Factory Default					
Back to Normal	Tap Back to Normal button will set security bypass policy to normal					
Force open	Tap force open to force open door. Door status will display Force open and door will be staying unlock until setup Back to Normal or Factory Default					
Fire alarm	Tap button to switch on Fire alarm detection function. Door status will					
detection ON	display ON.					
Fire alarm detection OFF	Tap button to switch off Fire alarm detection function. Door status will display OFF					
Alarm Off	Tap the button to release alarm triggered					

When Fire Alarm is being triggered (Circuit detector is connected to fire alarm device), door will be opened automatically. Door status will be back to normal until fire alarm status switch off. No need manually switch off.

• Event Handle

Event Handle

					Hard Alarm	Soft Alarm	Soft Alarm	IP Camera	E-mail Alerts
E-mail Alerts			Latched Time(Second)	0	0	0	0	0	
Location :		(max59)		Event					
SMTP Mail Server		(max47)		Unregistered User	0	0	0	0	0
	(max47)		Deactivated User	0	0			0	
Mail from :		(max47)		Not Allowed Door	0	•	0	0	0
		username :	_	Time Zone Violation	•	•			0
SMTP Server Requires	No 🔻	(ma	(max45)	Expired User	•	•			0
Addrendouron .		passiona	(max29)	Anti Pass Back Violation		۲			۲
Mail To :		(2022/17)		Door open too long					0
mail to .	_	(max47)		Tamper Switch Breakdown	0	0		0	0
Mail Cc :		(max47)		Door Intruded	0	•	•	•	0
	Set			Duress Alarm On	0	0	0	0	0
				Fire Alarm On	0				

[Event handle] - 22

Hard Alarm

Latched Time ⁰	(sec,Max 65535 :	0 means unlimited)		
Unregistered User	Deactivated User	Not Allowed Door	Time Zone Violation	Expired User
Anti Pass Back Violation	🗏 Door open too long	Tamper Switch Breakdown	Door Intruded	🗉 Duress Alarm On
Fire Alarm On				
Set				

[Event handle] - 23

♦ About Event Handle

Event Type	
	$1 \cdot$ Event handle type can be selected by drop-down menu. Whenever the
	event type is chosen, the Un-Registry exception log will be generated
	upon user access door with un-registry card. When event trigger level is
Un-RegistryUser	set to higher than alarm trigger level, door relay will be triggered and
	send an alert message over Email if Email alert is set at the same time.
	2 \cdot When the recovery time is set to 0, relay action can only be switch off by
	clicking Alarm off button. Un-Registry event default trigger level is 0.
	$1 \cdot$ Event handle type can be selected by drop-down menu. Whenever the
	event type is chosen, once user card is being inactivated, the User
	Inactive log will be generated. When event trigger level is set to higher
User Inactive	than alarm trigger level, door relay will be triggered and send an alert
	message over Email if Email alert is set at the same time.
	$2 \cdot$ When the recovery time is set to 0, relay action can only be switch off by
	clicking Alarm off button. Un-Registry event default trigger level is 0
	$1 \cdot$ Event handle type can be selected by drop-down menu. Whenever the
	event type is chosen, once User Group is different than Door Group, the
	Not Allow Door access log will be generated. When event trigger level is
Not Allow Door	set to higher than alarm trigger level, door relay will be triggered and
	send an alert message over Email if Email alert is set at the same time.
	$2 \cdot$ When the recovery time is set to 0, relay action can only be switch off by
	clicking Alarm off button. Un-Registry event default trigger level is 0
	$1 \cdot$ Event handle type can be selected by drop-down menu. Whenever the
	event type is chosen, once User Group Time Zone is different than Door
	Group Time Zone, the Time Zone Violation access log will be generated.
Time Zone	When event trigger level is set to higher than alarm trigger level, door
Violation	relay will be triggered and send an alert message over Email if Email
	alert is set at the same time.
	$2 \cdot$ When the recovery time is set to 0, relay action can only be switch off by
	clicking Alarm off button. Un-Registry event default trigger level is 0

	$1 \cdot$ Event handle type can be selected by drop-down menu. Whenever the
	event type is chosen, once user swipe card or scan fingerprint over
	reader, door status will generate an Expired User access log. When event
F	trigger level is set to higher than alarm trigger level, door relay will be
Expired User	triggered and send an alert message over Email if Email alert is set at the
	same time.
	2 \cdot When the recovery time is set to 0, relay action can only be switch off by
	clicking Alarm off button. Un-Registry event default trigger level is 0
	$1 \cdot$ Event handle type can be selected by drop-down menu. Whenever the
	event type is chosen, once door status is set Anti-Passback level, when
	user swipe card or scan fingerprint with error APB level, system will
	generate APB violation log. When event trigger level is set to higher than
APB Violation	alarm trigger level, door relay will be triggered and send an alert
	message over Email if Email alert is set at the same time.
	2 \cdot When the recovery time is set to 0, relay action can only be switch off by
	clicking Alarm off button. Un-Registry event default trigger level is 0
	$1 \cdot$ Event handle type can be selected by drop-down menu. Whenever the
	event type is chosen, once door open too long after user scan card or
	fingerprint, system will be triggered with Door Open too long access
Door Open too	log. , When event trigger level is set to higher than alarm trigger level,
long	door relay will be triggered and send an alert message over Email if
	Email alert is set at the same time.
	$2 \cdot$ When the recovery time is set to 0, relay action can only be switch off by
	clicking Alarm off button. Un-Registry event default trigger level is 0
	$1 \cdot$ Event handle type can be selected by drop-down menu. Whenever the
	event type is chosen, once fingerprint reader is opened in illegally
	method, system will generate Tamper Switch record. When event trigger
Tompor Switch	level is set to higher than alarm trigger level, door relay will be triggered
Tamper Switch	and send an alert message over Email if Email alert is set at the same
	time.
	2 \cdot When the recovery time is set to 0, relay action can only be switch off by
	clicking Alarm off button. Un-Registry event default trigger level is 0
	$1 \cdot$ Event handle type can be selected by drop-down menu. Whenever the
	event type is chosen, once break in the door in illegally method, system
	will generate Door Intruded access log. When event trigger level is set to
Door Intruded	higher than alarm trigger level, door relay will be triggered and send an
	alert message over Email if Email alert is set at the same time.
	2 \cdot When the recovery time is set to 0, relay action can only be switch off by
	clicking Alarm off button. Un-Registry event default trigger level is 4

	1 • Event handle type can be selected by drop-down menu. Whenever the				
Anti Duress	event type is chosen, once user prompt Anti Duress function with				
	password#, system will generate Anti Duress log. When event trigger				
	level is set to higher than alarm trigger level, door relay will be triggered				
	and send an alert message over Email if Email alert is set at the same				
	time.				
	2 \cdot When the recovery time is set to 0, relay action can only be switch off by				
	clicking Alarm off button. Un-Registry event default trigger level is 4				
	$1 \cdot$ Event handle type can be selected by drop-down menu. Whenever the				
	event type is chosen, once Fire Alarm is being triggered, system will				
	generate Fire Alarm log and alert. When event trigger level is set to				
Fire Alarm	higher than alarm trigger level, door relay will be triggered and send an				
	alert message over Email if Email alert is set at the same time.				
	$2 \cdot$ When the recovery time is set to 0, relay action can only be switch off by				
	clicking Alarm off button. Un-Registry event default trigger level is 5				
	Event trigger latched time setting can be max at 65535 seconds. There'll be				
Latched Time	no latched time when value is set to 0 and need to disable the alarm				
	manually.				
► Event Trigger T	ype				
Hard Alarm	Setup hardware I/O trigger performance by selecting event names				
Soft Alanm 1	Define even trigger on BF-50 Relay 2 by selecting even names on Event				
Soft Alarin 1	trigger type page				
Soft Alanna 2	Define even trigger on BF-50 Relay 3 by selecting even names on Event				
Soft Alarin 2	trigger type page				
IP Camera	Setup IP Camera to take snap shot when certain event type triggered				
E	Setup Email alert to certain receiver by selecting event name on Event				
E-man alert	trigger type page				
► E-mail Alert					
Device name	Input device name to send E-mail alert				
SMTP Mail	Input SMTP mail server IP (NOT compatible to Web mail so far)				
Server	input SWITE man server if (NOT compatible to web man so fai)				
Mail from	Input sender's mail location				
SMTP Server	Sat ID and password for the Mail server				
verification	Set ID and password for the Man server				
Mail to	Input receiver's E-mail address				
Mail carbon	Input C.C. receiver's E. mail address				
сору					
Setup(Button)	Save the information have set				



【IP Camera】 - 24

About	IP	Camera
About	11	Camera

► IP Camera		
IP Camera	Input IP address for the IP Camera	
PORT	Input Port number for the IP Camera (Default is 80)	
	Input model name of the IP Camera. There are: VIVOTEK IP7133/7330,Soft	
Model	Well WE1612H and IP7131/7135 can be selectable.(Default is VIVOTEK	
	IP7133/7330)	
Account	Input account name for the IP Camera	
Password	Input password for the IP Camera	
Door name	Display latest photo for the door	
Setup(Button)	Save the information have set	
Refresh(Button)	Refresh current screen	



Backup

Tips : This command will export the User Registry data for backup purpose.

@ Database(database.cfg) User Data(userdata.cfg) User List(userlist.txt)

BACKUP

[Back up **]** - 25

♦ About Back Up

► Backup	
System setup (database.cfg)	Back up items : Terminal Setup \ Password Setup \ Time set Setup \ Time zone Setup \ Group setup \ Holliday Setup \ Door Setup
User list-basic	Back up items :
(userlist.txt)	User ID 、 Card number 、 Name 、 User type 、 Group





♦ About Restore

► Restore		
System setup (database.cfg)	Restore items : Terminal Setup 、 Password Setup 、 Time set Setup 、 Time zone Setup 、 Group setup 、 Holliday Setup 、 Door Setup	
User List (userdata.cfg)	Restore items : User ID 、 Card number 、 Name 、 Expired check 、 Status 、 User type 、 Group 、 Bypass time zone level 、 Personal password	
User List-Basic (userlist.txt)	Restore items : User ID 、 Card number 、 Name 、 User type 、 Group	

※ Restore function is different between UserData.cfg 、 UserList.txt



♦ About Reboot

► Butto	n
Reboot	MFBio device reboot (Warm start)



♦ About Firmware upgrade

► Step by step

Click "Browser" button to search and select the firmware

Click "Upgrade" button to run firmware upgrde

► Remark

Firstly upgrade Firmware Code then Web code is necessary

♦ Reset				
Reset All				
User Data Access Logs SELECT ALL Delete	🗏 Group 🔲 Time Z	one 🔲 Time Set	🔲 Holiday 🗌] System Logs
Reset System to Factory Default - Factory Default				



♦ About Reset

► Data delete			
Laar kat	Ticking User List check box then press Delete button to delete all user list from		
User list	system		
A	Ticking Access log check box then press Delete button to delete access log		
Access log	from system		
Group	Ticking Group check box then press Delete button to delete Group from system		
Time Zone	Ticking Time Zone check box then press Delete button to delete Time Zone		
The Zone	from system		
Time Set	Ticking Time Set check box then press Delete button to delete Time Set from		
Time Set	system		
II - P.J	Ticking Holiday check box then press Delete button to delete Holiday from		
monuay	system		
System Log	Ticking System log check box then press Delete button to delete System log		
System Log	from system		
► Button			
Select All	Select all items		
Delete	Run Delete function		
Step by step :			
1 • Select all items are going to be delete			
2 · Click Delete button			
► Set to Factory	⁷ Default		
Factory Default	Set to Factory Default when above set up is done		



Event name	Event status	How to revive	
Door open delay	Door open time over the default time (with door sensor)	Close the door	
Door closed	Door closed after "Door open delay" event triggered.	N/A	
Pulse Open	Pulse open door from remote site	Tap"Back to Normal" button to turn to normal	
Pulse Close	Pulse close door from remote site	Tap "Back to Normal"button to turn to normal	
Back to Normal	Door status back to normal	N/A	
Identification failure	User identification failed	Check access method for user is to conform to door's policy	
Unregister	Card is not registered	Register the card	
Inactive	User authority and data invalid	Active user's authorization	
APB violation	APB policy violated when APB function is activated	Check APB level	
Not Allowed	User Group is not allowed to access a certain door	Check setting of user Group	
Door intruded	Door intruded illegally	Check door sensor funcationality	
Tamper switch breakdown	Tamper switch is being triggered	Check tamper switch on the terminal status	
Push Button	Open door by push button	N/A	
Normal Close	Door closed after door opened	N/A	